



Dimensions

A - Seat Depth - 21" / 53cm B - Seat Height - 20" / 51cm C - Arm Height - 26" / 66cm

 
Features

- Hardwood, softwood and engineered wood products; all joints pinned & glued for uniformity & strength
- Back: 11 or 12 gauge sinuous springs which are engineered to provide lasting comfort and strength
- Seat: 8 gauge sinuous wire springs for superior ride and comfort
- High resilience seat foam for superior durability and comfort
- Back filled with blown fibre
- Toggle power mechanism

40620 BRUNSWICK



Dimensions shown as Width x Depth x Height. Specifications are correct at time of printing and are subject to change without notice. LHF - left hand facing RHF - right hand facing IA - inside arm to inside



01 Sofa 92 x 38 x 39" 234 x 97 x 99cm IA: 67" / 170cm



21 Sofabed, Double 88 x 39 x 39" 224 x 99 x 99cm IA: 61" / 155cm



02 Chair 46 x 39 x 39" 117 x 99 x 99cm IA: 22" / 56cm



26 LHF Sofabed 54" 27 RHF Sofabed 54" 75 x 39 x 39" 191 x 99 x 99cm



03 Loveseat 72 x 39 x 39" 183 x 99 x 99cm IA: 46" / 117cm



30 Armless Recliner 60 Power Armless Recliner 23 x 39 x 39" 58 x 99 x 99cm



04 Home Theater Ottoman 44 x 28 x 19" 112 x 71 x 48cm

33 Swivel Rocker

39 Power Rocker

117 x 99 x 99cm

Recliner Chair



Pwr

Chair

Recliner

46 x 39 x 39"

IA: 22" / 56cm

32 Rocker Recliner Chair 46 RHF Recliner Chair 31 Wallhugger Recliner 47 LHF Recliner Chair 66 RHF Power Recliner 94 x 38 x 39" 67 LHF Power Recliner 239 x 97 x 99cm

09 Corner Curve

119 x 119 x 99cm

47 x 47 x 39"

36 x 39 x 39" 35 Wallhugger Recliner 91 x 99 x 99cm



10 Armless Chair 23 x 39 x 39" 58 x 99 x 99cm



51 Sofa Recliner 61 Power Sofa Recliner IA: 68" / 173cm



53 Loveseat Recliner 63 Loveseat Recliner Power 72 x 39 x 39"

183 x 99 x 99cm IA: 46" / 117cm



A0 11 Degree Storage Wedge 17 x 39 x 36"

43 x 99 x 91cm



A1 45 Degree Storage Wedae 36 x 37 x 36" 91 x 94 x 91cm



A2 Storage Console 13 x 39 x 36" 33 x 99 x 91cm



How We Measure

Height - measured from the highest point of the back pillow to the floor.

Depth - measured from the front edge of the seat cushion to the top of the back.

Width - measured from the widest point of the arm or arm pillow to the widest point of the opposite arm or arm pillow.

Arm Height - measured from the top of the arm to the floor.

Seat Height - measured from the crown of the seat cushion to the floor.

Warranty

Wood Frames, Springs or Webbing - ten year warranty

Metal Frames - two year warranty under normal household use

Motion Reclining Mechanisms - seven year warranty

Reclining Chairs, Sofabed Mechanisms and Sofabed Mattresses - two year warranty

 
Seat Cushion Foam and Fibre-filled Components - five year pro-rated warranty

40620 BRUNSWICK



Popular Configurations

Note: Always assemble configurations from right hand facing to left hand facing components.



Reclining Sectional

5-Seat Curved Corner Large **Reclining Sectional**

108 x 108"

274 x 274cm

129 x 70"

328 x 178cm



5-Seat Curved Corner Small Reclining Sectional with Sofabed

106 x 124"

269 x 315cm

 


5-Seat Curved Corner Console

Sofabed

119 x 124"

302 x 315cm



4-Seat Console Separated Angled Separated Reclining Sectional with Reclining Sectional with Loveseat

168 x 75"

427 x 191cm

3-Seat Console Separated Angled 4-Seat Console Separated Angled **Reclining Sectional**

 
166 x 74"

422 x 188cm

3-Seat Console Separated **Reclining Sectional**

121 x 66"

307 x 168cm



4-Seat Console Separated **Reclining Sectional**

157 x 66"

399 x 168cm